 


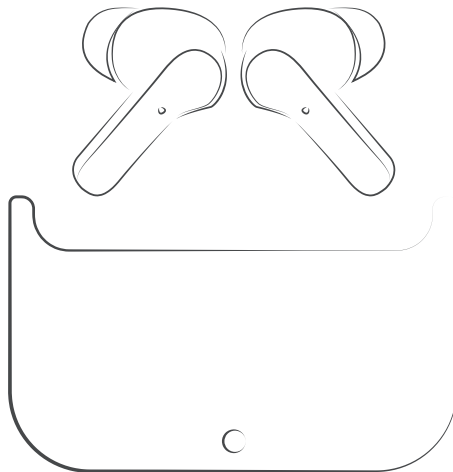

HACO Wireless Earphones

User manual



 December 2021 - Uitgave "Earpods"
Wij besteden veel aandacht aan de inhoud van deze handleiding, echter, Haco Tail Lift Parts aanvaardt geen aansprakelijkheid voor eventuele fouten of onvolkomenheden in de tekst.


De overname van tekst of foto's is alleen met vermelding van de bron en met de goedkeuring van Haco Tail Lift Parts toegestaan.

 Dezember 2021 - Ausgabe "Earpods"
Wir haben den Inhalt dieses Handbuchs sehr sorgfältig erstellt. Dennoch übernimmt Haco Tail Lift Parts keine Haftung für eventuelle Fehler oder Unvollkommenheiten im text.


Die Verwendung von Text oder Fotos ist nur mit Quellenangabe und mit Genehmigung von Haco Tail Lift Parts gestattet.

 December 2021 - Edition "Earpods"
Although much attention and care has been spent on the content of this manual, Haco Tail Lift Parts accepts no liability for errors or incomplete information in the text.

 If you wish to use text or photographs in this edition, you must state the source of this material and request prior approval from Haco Tail Lift Parts.

 Décembre 2021 - Publication "Earpods"
Nous avons rédigé ce manuel avec le plus grand soin, mais Haco Tail Lift Parts ne peut être tenu responsable des erreurs ou des imprécisions éventuelles du texte.

 La reproduction des articles ou des photos est uniquement autorisée avec mention de la source et sur autorisation de Haco Tail Lift Parts.

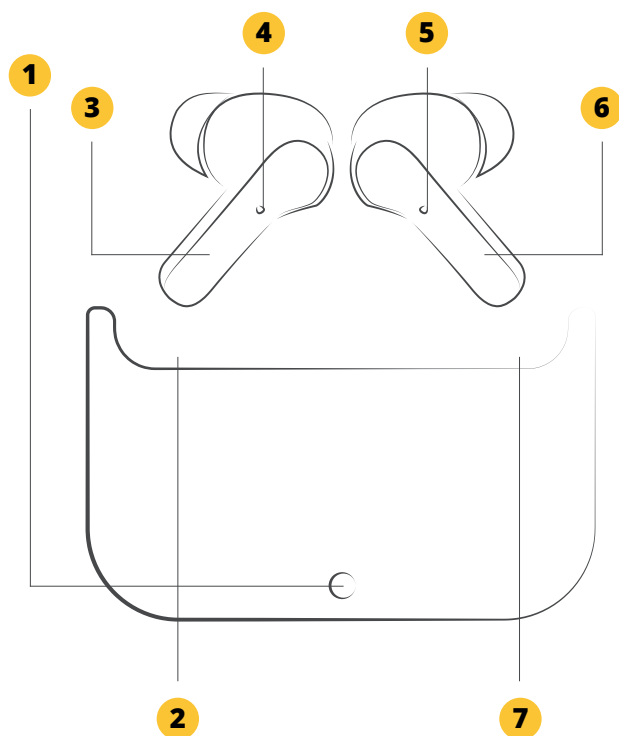


- 1** Charger box light
- 2 7** Earphones charging port
- 3 6** Touch button
- 4 5** Earphones indicator (LED)

Usage


For the best audio experience it is recommended to wear the correct size silicone ear caps. Please note the difference in left and right earphones.

Switch on

 Method 1: The earphones switch on automatically when taken out of the charger box.

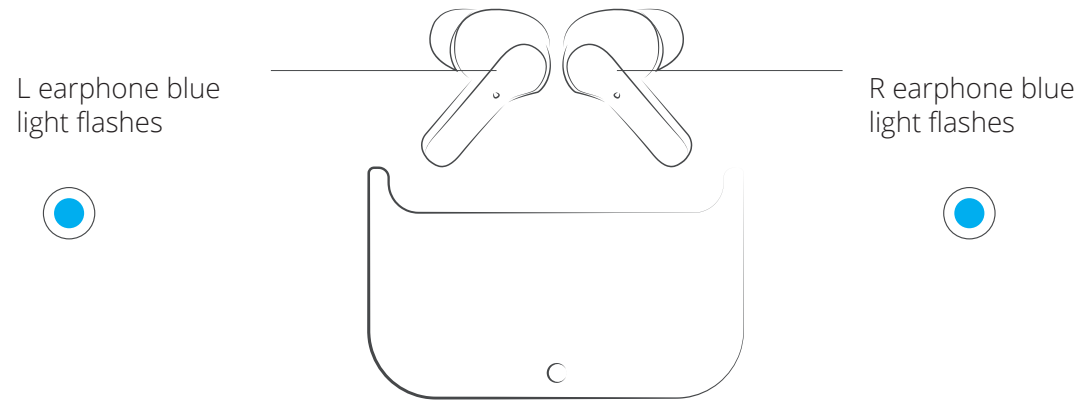

Method 2: If the earphones are out of the charger box you can switch them on by pressing the touch button for 3-5 seconds.

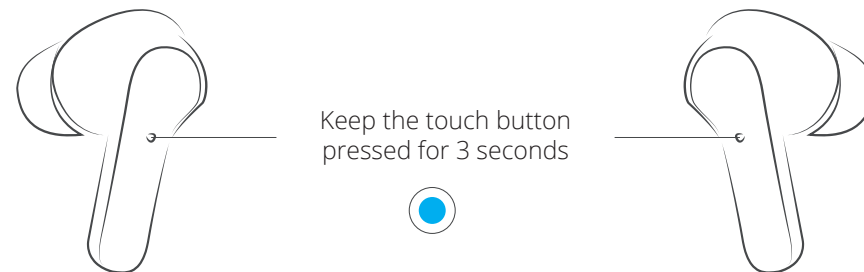

To both methods applies: If the earphones are switched on, the LED flashes once and you will hear a sound prompt.

Switch off


Method 1: The earphones switch off automatically when put into the charger box.

Method 2: If the earphones are out of the charger box you can switch them off by pressing the touch button for 3-5 seconds.

Note: If the earphones are disconnected from the device, the earphones will switch off automatically after 5 minutes.

Stereo mode

- 1 The earphones switch on automatically when taken out of the charger box. Within a few seconds, the left and right earphones will automatically connect to each other. While connecting the LED will flash quickly. Once connected, the LED will flash slowly.

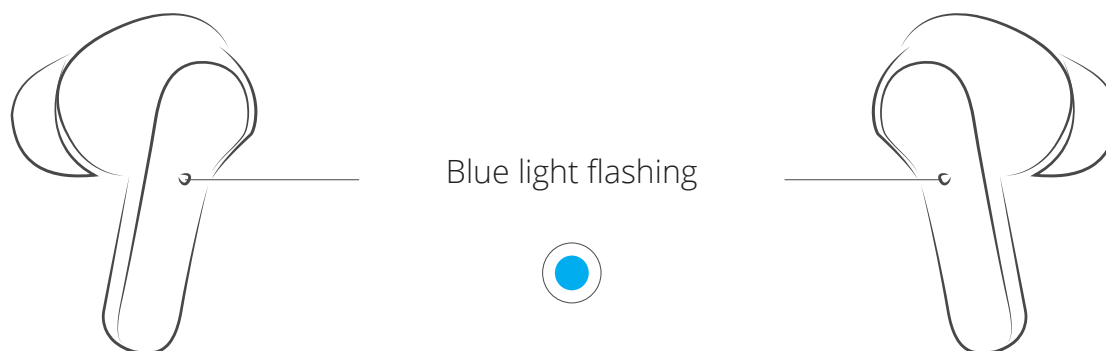

Play music

- ✓ Touch one of the buttons on the earphones once to pause/play
- ✓ Press the touch button for 1 second to switch songs ('L' for previous song, 'R' for next song).
- ✓ Touch the button twice to adjust the volume ('L' for lowering, 'R' for raising).

Calling

- ✓ Answer a call: touch one of the buttons briefly
- ✓ End a call: touch one of the buttons briefly
- ✓ Reject a call: touch one of the buttons longer
- ✓ Adjust the volume during a call via your device

Charging

- ✓ Charging: the blue light is on
- ✓ The earphones can be charged 3 times with a full charger box
- ✓ Reject a call: touch one of the buttons longer
- ✓ If the earphones are not used for a longer period make sure to charge them at least every 2 months.

Specifications

- ✓ Bluetooth version: 5.0
- ✓ Voltage rating and energy capacity: 7.7V/400mAh
- ✓ Battery capacity: 2*3.7V/60mAh
- ✓ Headphone charge time: around 1,5 hours
- ✓ Bluetooth profiles supported: HFP/A2DP/AVRCP
- ✓ Operating frequency: 2.40 GHZ-2.48 GHZ
- ✓ RF Sensitivity: -92dBm
- ✓ Working temperature range: -10+50°C
- ✓ Maximum transmission range: <15M

Packing list

- ✓ 2 earphones (Left and Right)
- ✓ USB cable
- ✓ User manual
- ✓ Charging box
- ✓ 4 Ear caps (Small and Large)

Trouble shooting

Fault	Cause	Solutions
Can't switch the earphones on	Earphones are low battery / Crash	Charge the earphones / Press the earphones touch button for 8 seconds.
No charging indication	The earphones are not correctly put into the charger box	Adjust earphones position
Automatically shut down	Earphones are low battery	Charge the earphones
The earphones have an echo	The volume is too high or the environment is too noisy	Lower the volume
The earphones are noisy / signal intermittent	Outside environment interference is too high	Change position or move closer to the device
Low volume	Wearing earphones incorrectly or the volume is too low	Adjust the earphones position or raise the volume on the device
Earphones have no sound	Pairing unsuccessful between L and R earphones	Connect and/or pair again



www.haco-parts.com